


AiP10009

1/350 SCALE

THUNDERBIRD 1 LAUNCH BAY

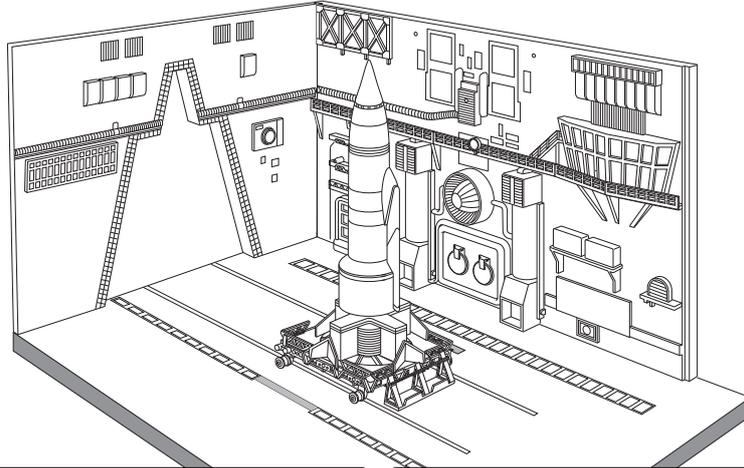

Paint colour references:

We recommend using the following Humbrol paint colours:
(Paints not included)


11 SILVER	90 MATT BEIGE GREEN
16 GOLD	105 MATT MARINE GREEN
33 MATT BLACK	128 SATIN US COMPASS GREY
34 MATT WHITE	154 MATT INSIGNIA YELLOW
53 GUNMETAL	164 SATIN DARK SEA GREY
60 MATT SCARLET	
77 MATT NAVY BLUE	
82 MATT ORANGE LINING	
89 MATT MIDDLE BLUE	

The original Thunderbirds television series was produced in a time before CGI and computers. Skilled model makers and technicians created several models in varying scales depending on the shot required in the storyline. This coupled with camera lighting from different angles means the various craft do appear to be different colours in certain scenes. The paint codes provided are a basic guide and we would suggest watching the episodes and referring to the box photo for further detailed information.

How to apply decals:


Waterslide decals are supplied with this model kit.
Please follow these instructions when applying.

①

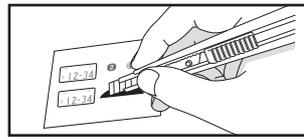


• Cut out the decal to the required shape using scissors or a craft blade.

②

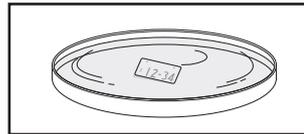

• Dip the decal in water for 10 to 20 seconds.

③

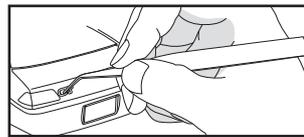

• Place decal in the desired position and slide it gently from the backing sheet using tweezers

• Adjust position if required and dry excess water with a soft cloth.

You will also need: (not included)



Plastic Cement



Sprue Nipper



Craft Knife



Tweezers



Double Sided Tape

Symbol guide:

← Glue here

← - - - No glue required



ADVENTURES IN PLASTIC
A Bachmann Europe Production

13 Moat Way, Barwell, Leicestershire, LE9 8EY
01455 841756 • www.bachmann-europe.co.uk

Thunderbirds™ and © ITC Entertainment Group Limited 1964, 1999 and 2020. Licensed by ITV Ventures Limited. All rights reserved. © Bachmann Europe Plc 2019.




Carefully check the contents of the kit, including parts and decals, before assembly.

PARTS LIST


 Parts not required

This kit does not include paints or glue. Please purchase them separately.


Wall B Parts

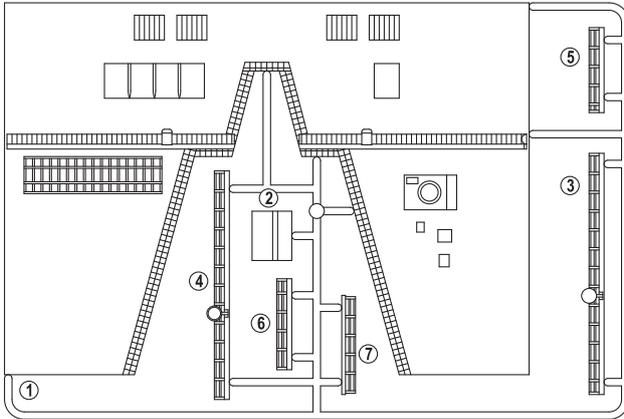


Wall A Parts

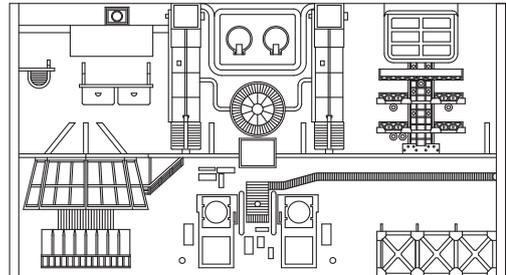


Sprue C

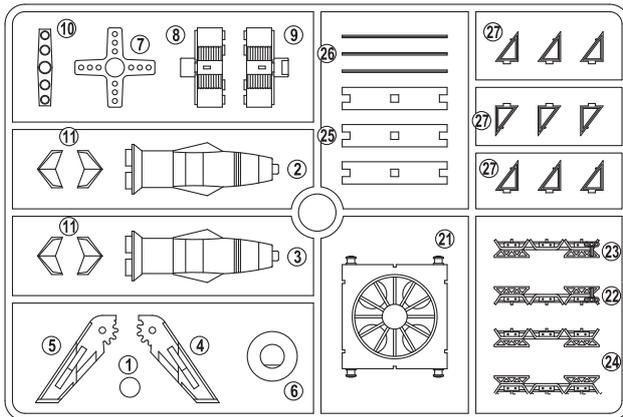


Foam polystyrene floor panel

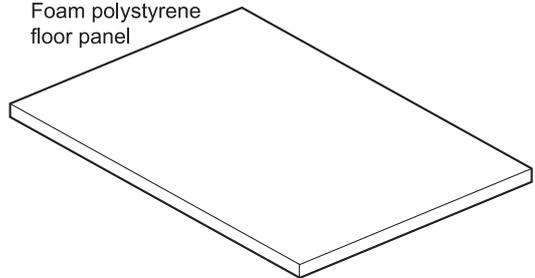



Sprue D

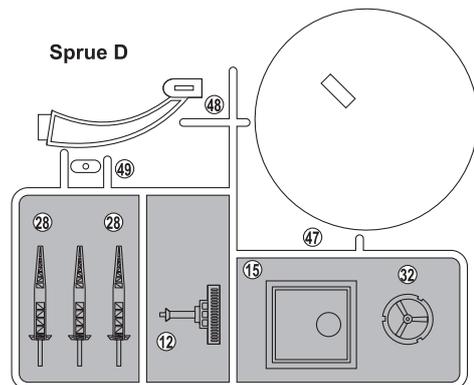

Printed floor panel

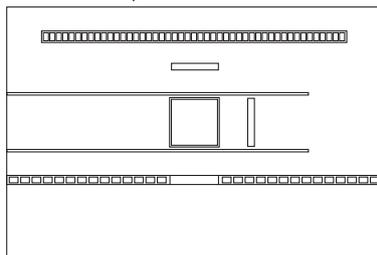


Decal

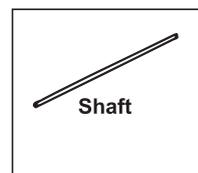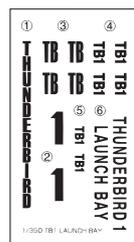


1 Floor panel assembly

Fix the floor panels with double-sided tape.
(Tape not included)

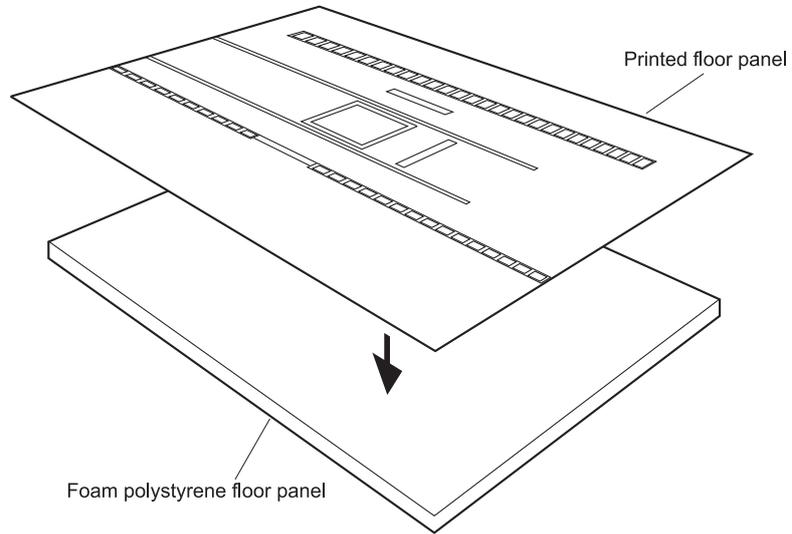

2 Wall assembly


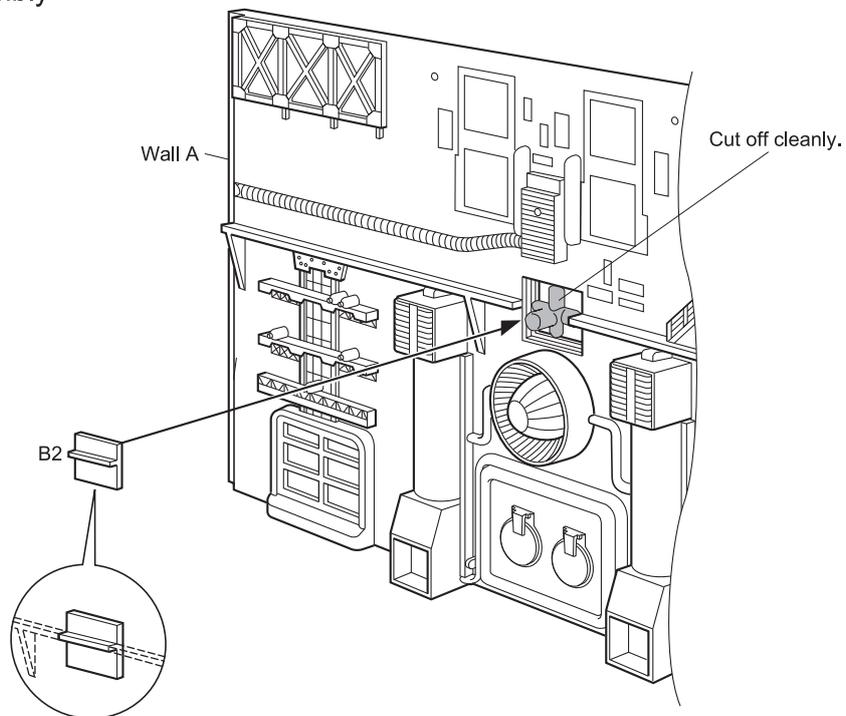


3 Wall decals and paint details

We recommend that you paint the wall before fixing any parts.

Tip:

By mixing the grey colours a greater variation of tones can be achieved and a more realistic and accurate model can be produced.

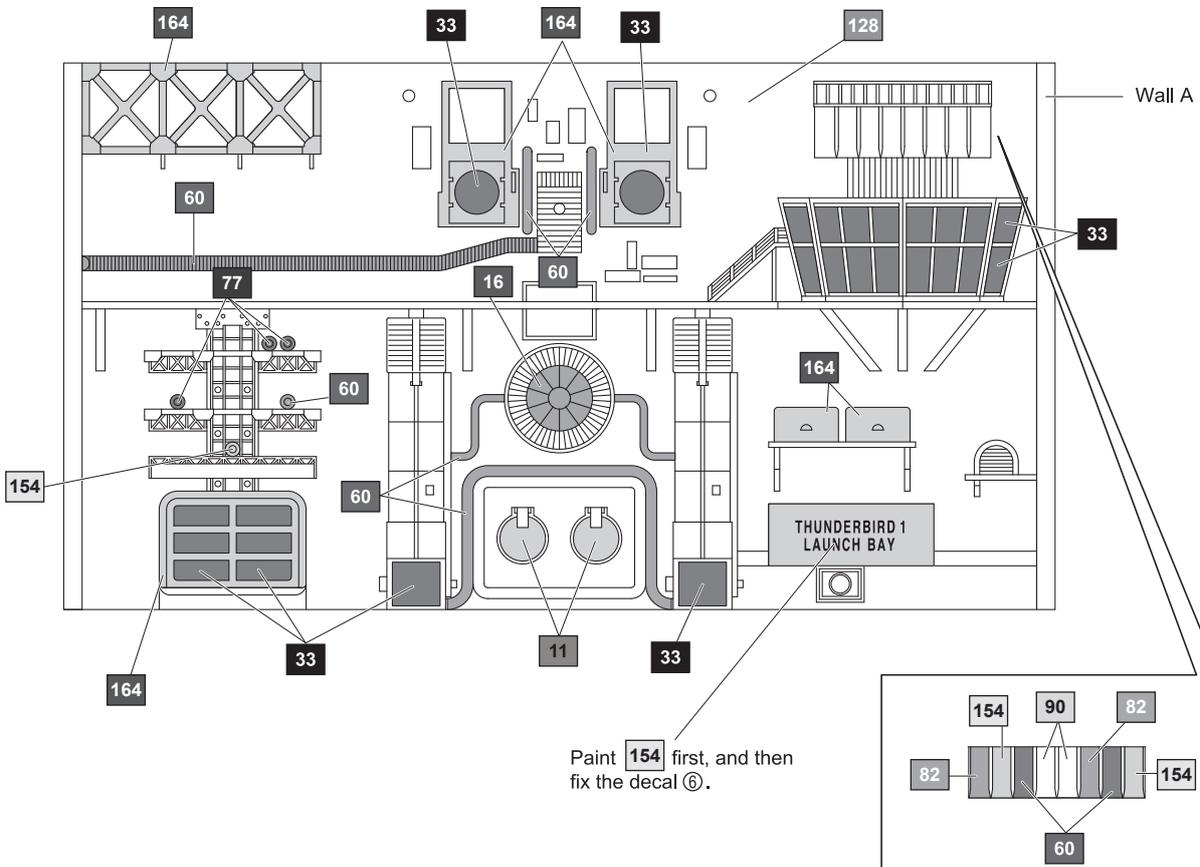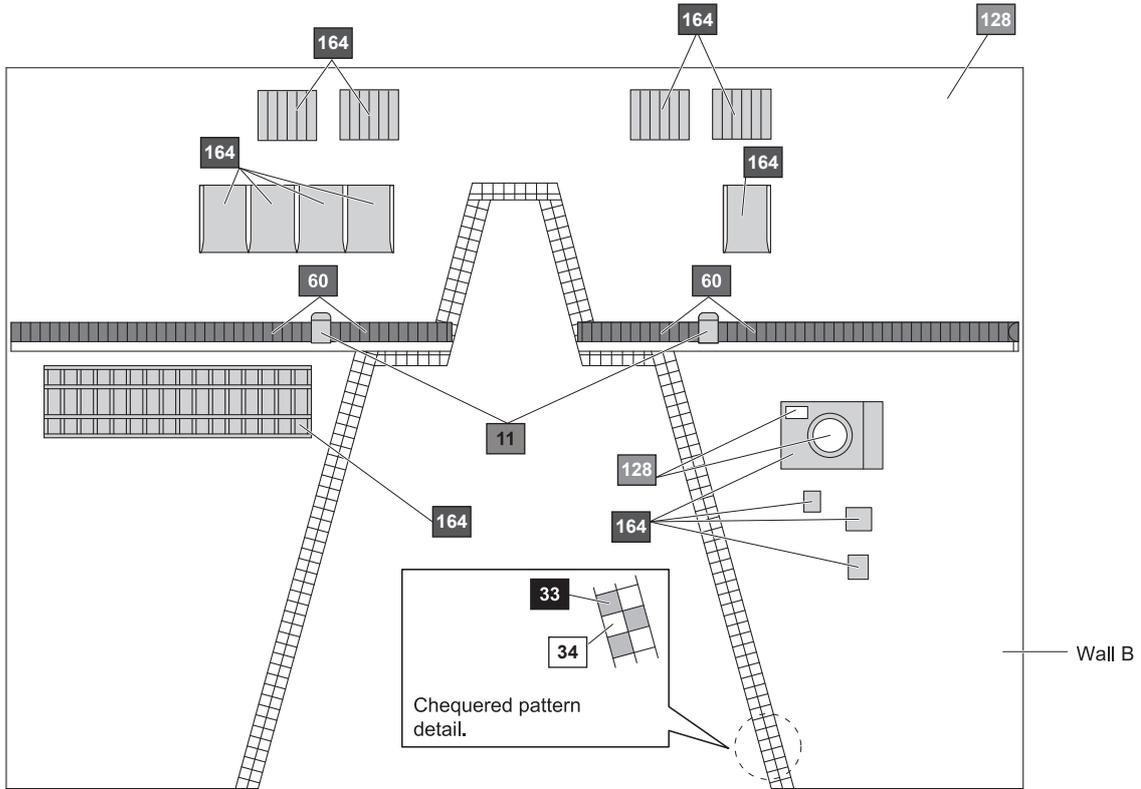


Paint 154 first, and then fix the decal ☺.

4 Installing the handrail


Fix B3, B4, B5 and B6 in this order.

* Ensure that rails B3, B4, B5 and B6 do not have any gaps between them.

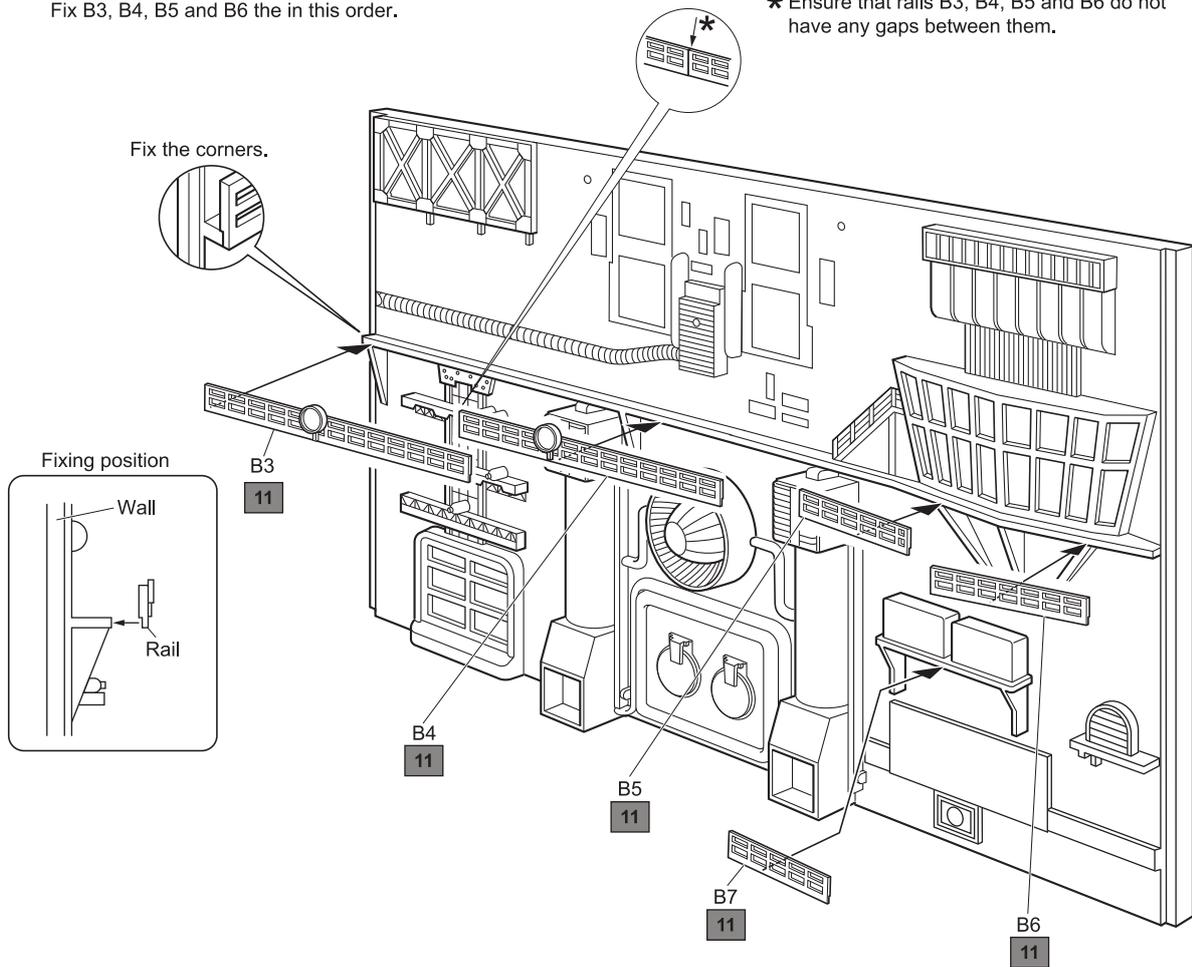


5 Assembling the launch pad

Ensure the correct edges are facing out.

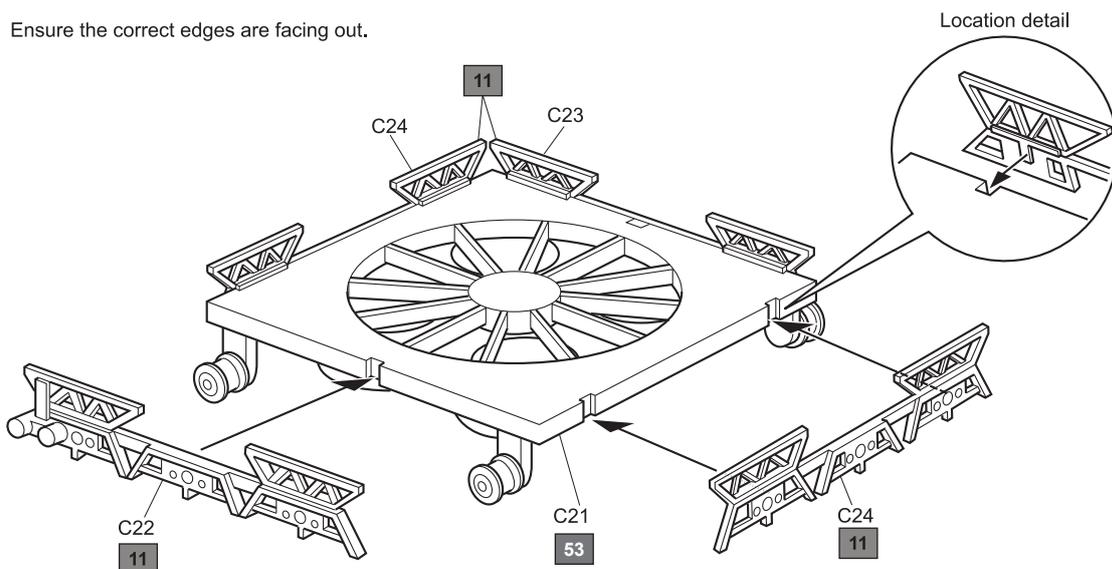

6 Truss assembly


Assemble 3 sets.

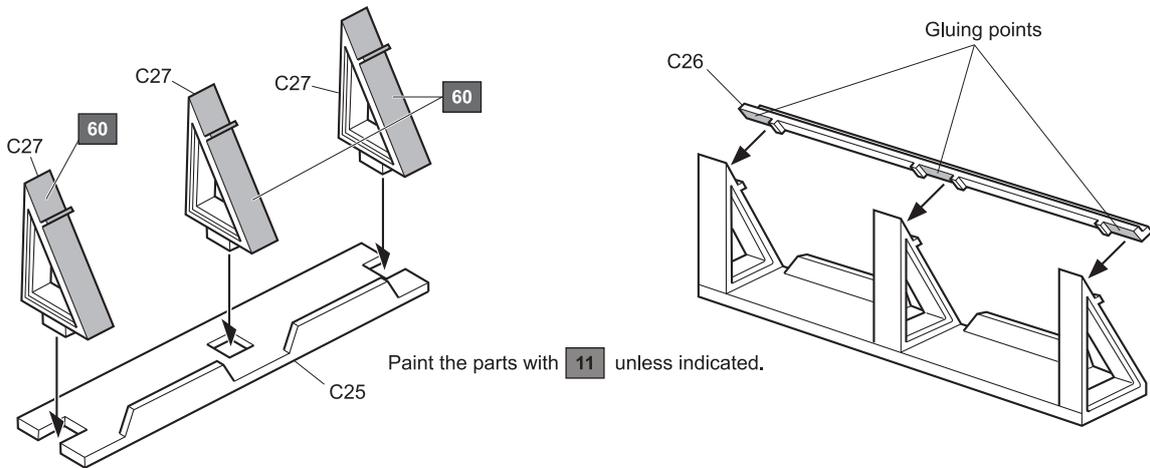

7 Thunderbird 1 assembly

See the instruction in **9** and paint before assembly.


Glue the body halves together, once the wings are correctly in position.

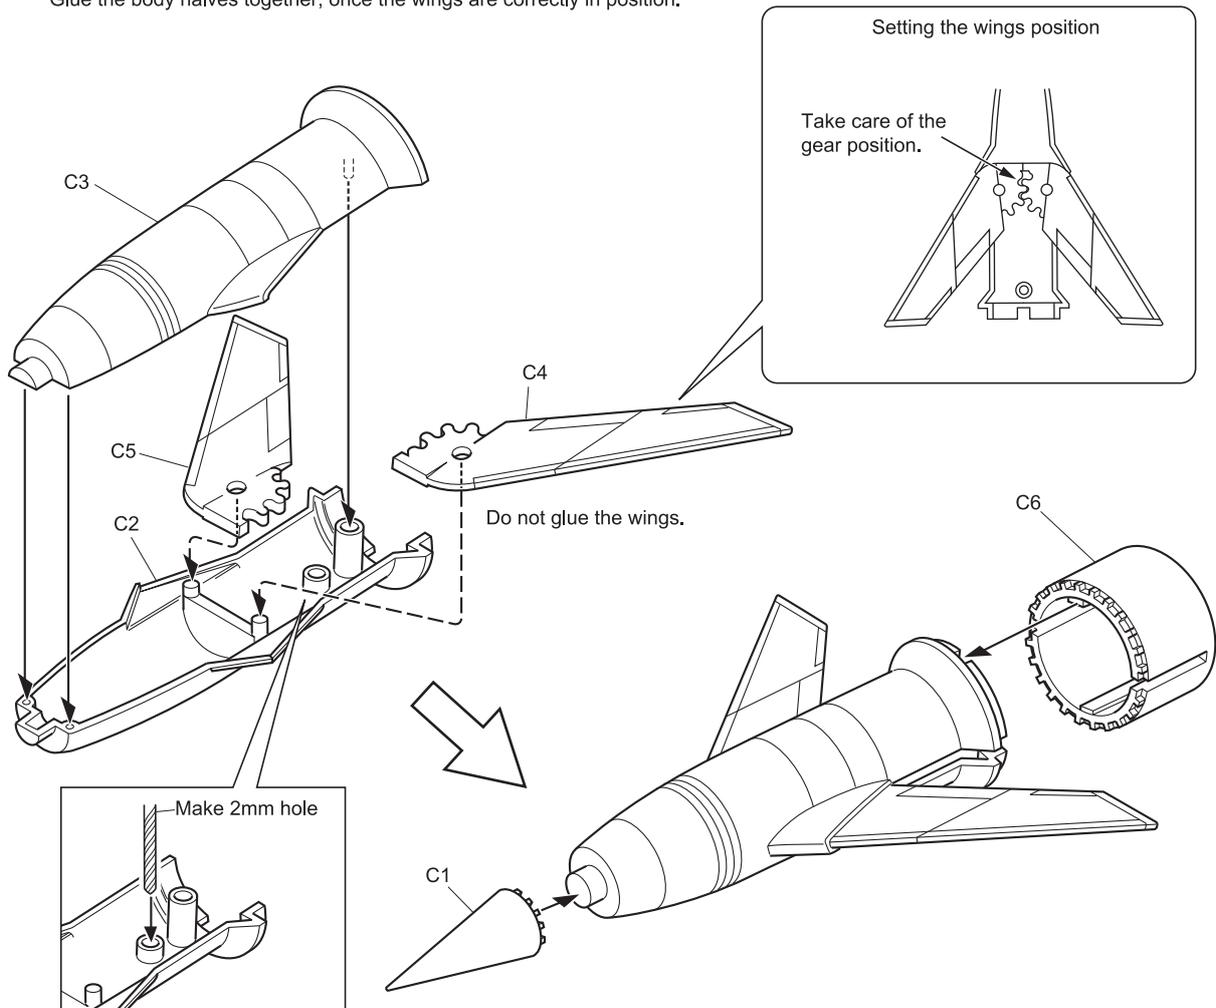



If you wish to use a display stand (see **11**), make a hole where shown.

8 Thunderbird 1 assembly


Paint before assembly, refer to 9.

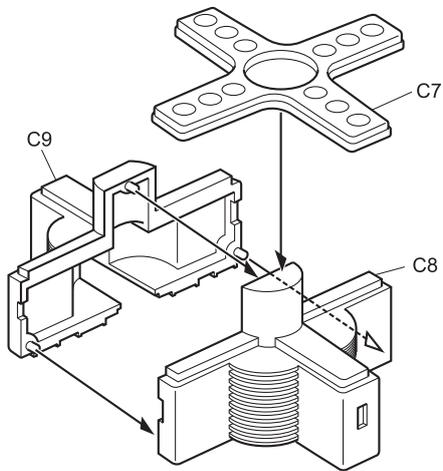



Back view

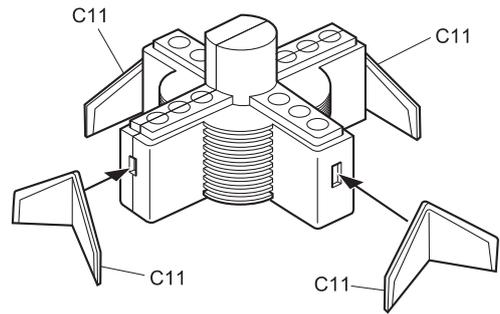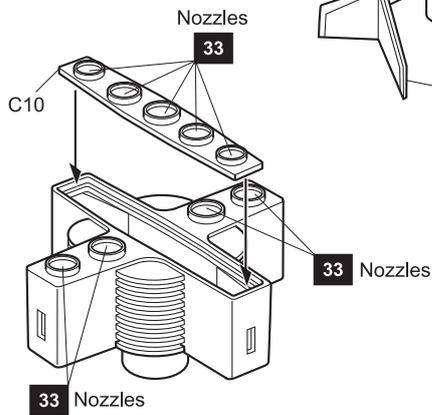


9 Engine installation

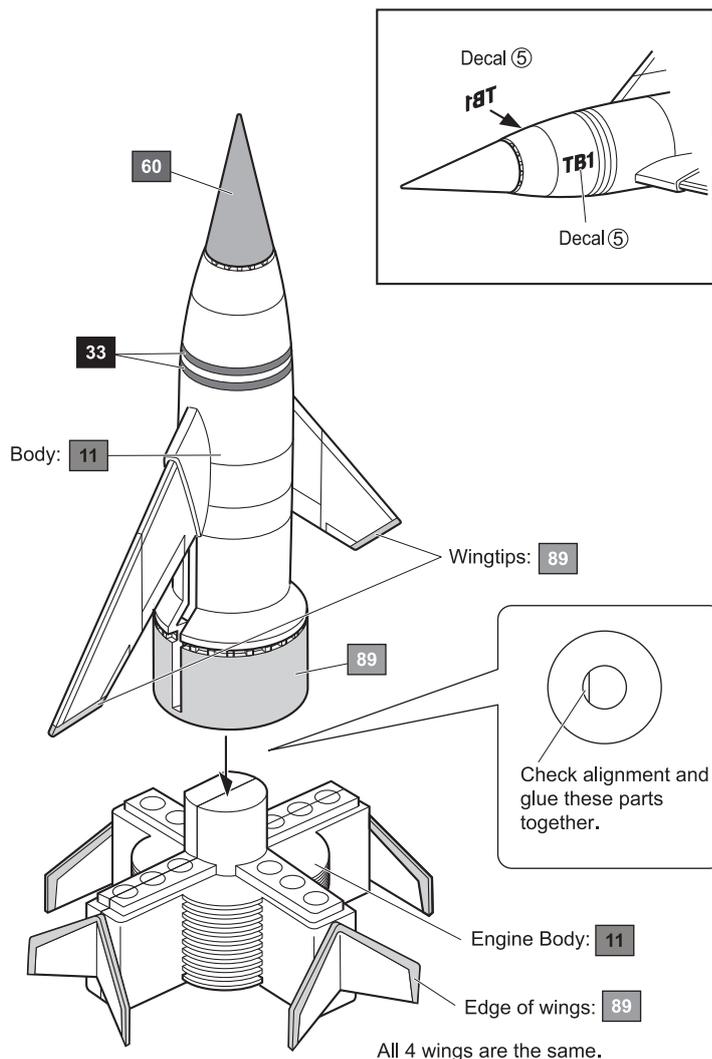

10 Thunderbird 1 Decal detail

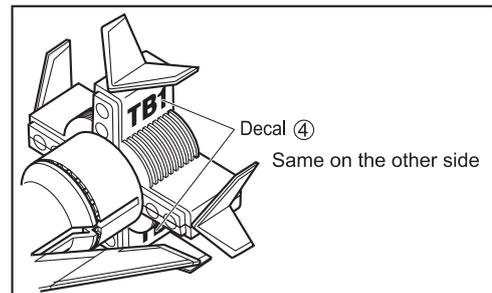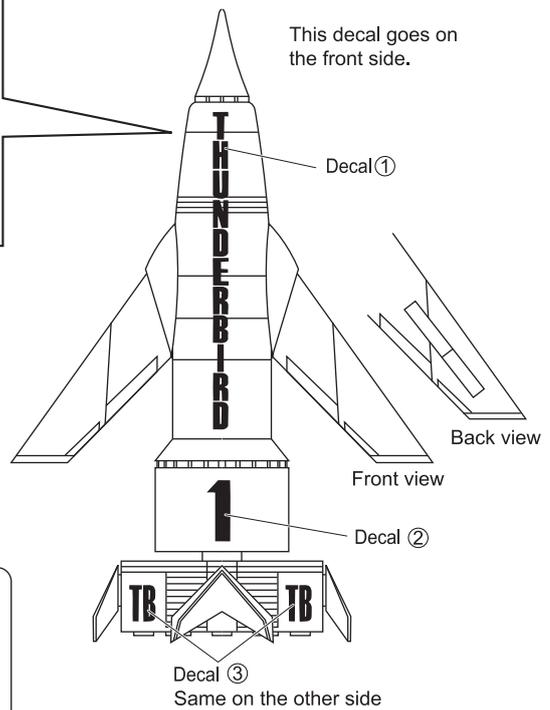

11 Wall and floor assembly

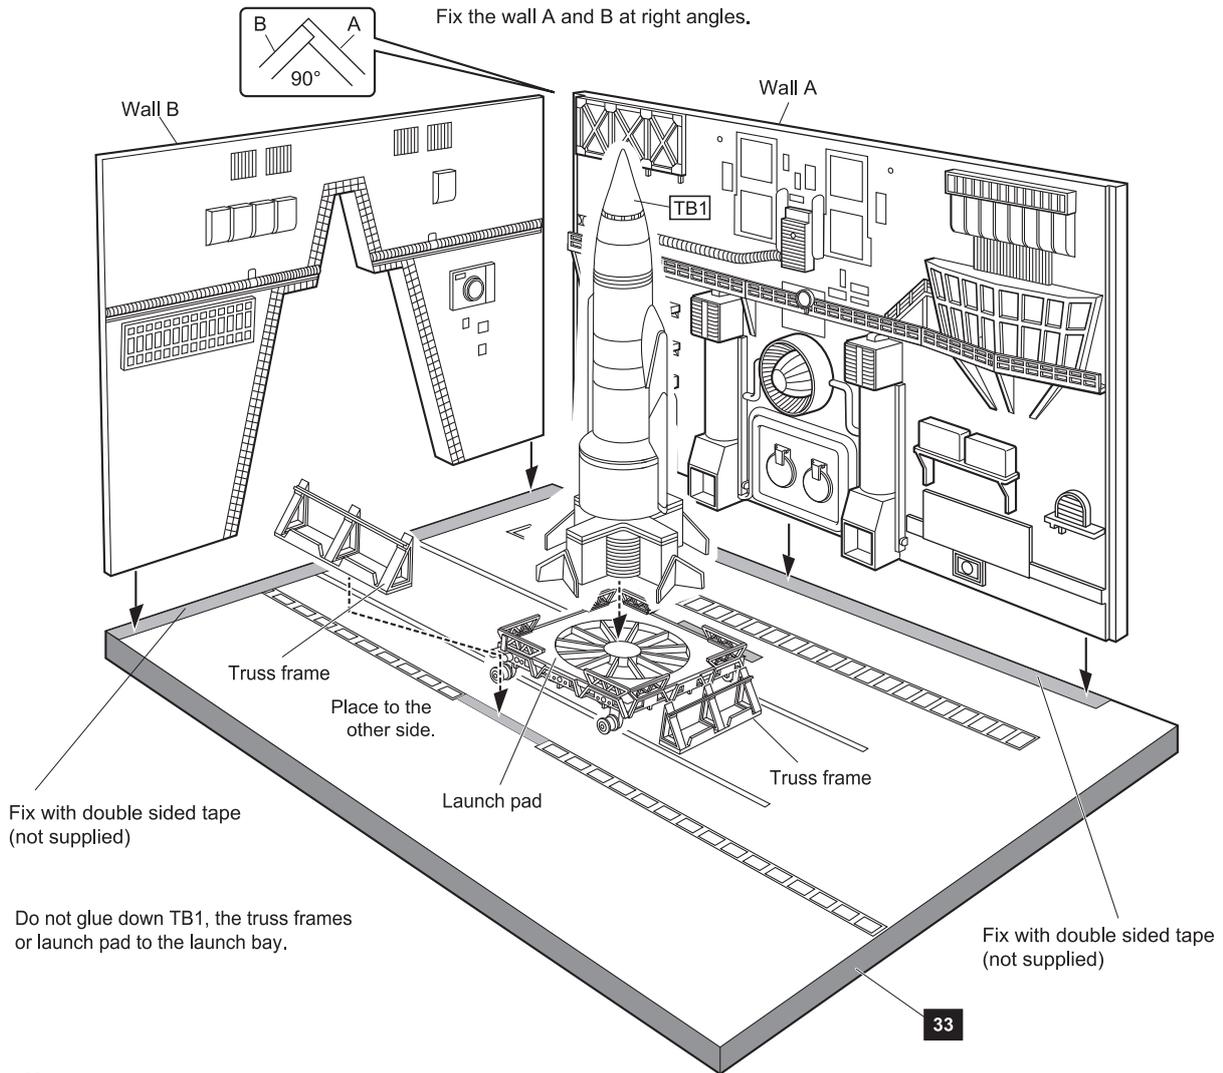

12 Alternative display stand assembly

