



AIP10010

1/350 SCALE  
TRANSPARENT  
**THUNDERBIRD 2**  
WITH 2 PODS AND ASSORTED RESCUE VEHICLES

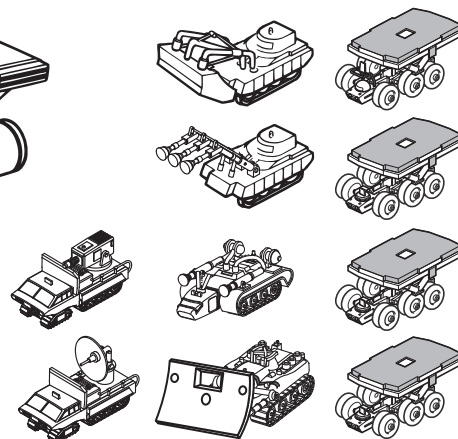

To display the internal details of the **visible Thunderbird 2** leave as many transparent parts in clear as you wish!

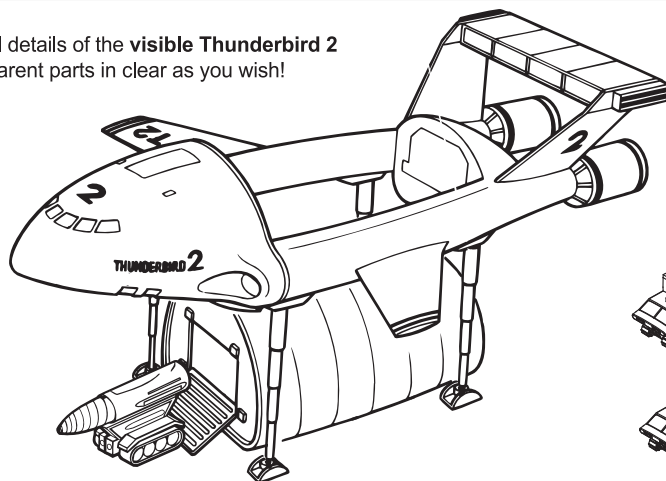

**Paint colour references:**




We recommend using the following Humbrol paint colours:  
(Paints not included)

<b>11</b> SILVER	<b>96</b> MATT RAF BLUE
<b>16</b> GOLD	<b>128</b> SATIN US COMPASS GREY
<b>21</b> GLOSS BLACK	<b>140</b> MATT GULL GREY
<b>33</b> MATT BLACK	<b>154</b> MATT INSIGNIA YELLOW
<b>53</b> GUNMETAL	<b>164</b> SATIN DARK SEA GREY
<b>60</b> MATT SCARLET	<b>27003</b> POLISHED STEEL
<b>77</b> MATT NAVY BLUE	
<b>82</b> MATT ORANGE LINING	

The original Thunderbirds television series was produced in a time before CGI and computers. Skilled model makers and technicians created several models in varying scales depending on the shot required in the storyline. This coupled with camera lighting from different angles means the various craft do appear to be different colours in certain scenes. The paint codes provided are a basic guide and we would suggest watching the episodes and referring to the box photo for further detailed information.

**How to apply decals:**

Waterslide decals are supplied with this model kit.  
Please follow these instructions when applying.

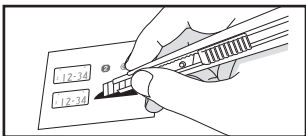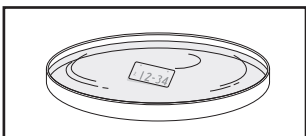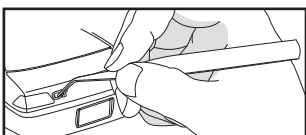- 
  - Cut out the decal to the required shape using scissors or a craft blade.
- 
  - Dip the decal in water for 10 to 20 seconds.
- 
  - Place decal in the desired position and slide it gently from the backing sheet using tweezers
  - Adjust position if required and dry excess water with a soft cloth.

**You will also need:** (not included)



Plastic Cement



Liquid Poly



Humbrol ClearFix



Sprue Nipper



Craft Knife



Tweezers

**Symbol guide:**

← Glue here

← - - - No glue required



**ADVENTURES IN PLASTIC**  
A Bachmann Europe Production

13 Moat Way, Barwell, Leicestershire, LE9 8EY  
01455 841756 • [www.bachmann-europe.co.uk](http://www.bachmann-europe.co.uk)










Thunderbirds™ and © ITC Entertainment Group Limited 1964, 1999 and 2020. Licensed by ITV Ventures Limited. All rights reserved. © Bachmann Europe Plc 2019.




Carefully check the contents of the kit, including parts and decals, before assembly.

## PARTS LIST

This kit does not include paints or glue. Please purchase them separately.

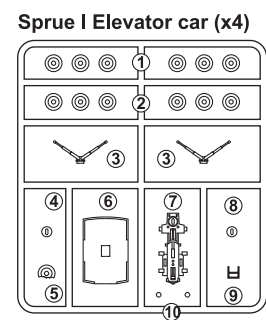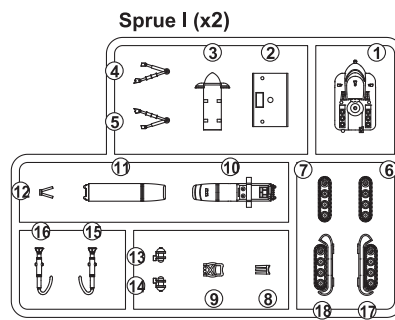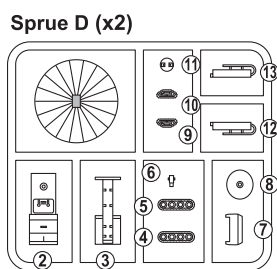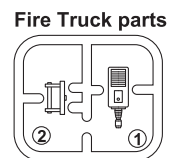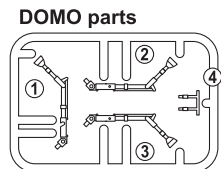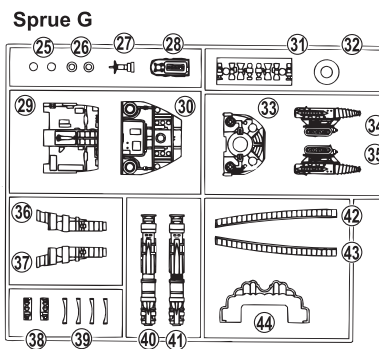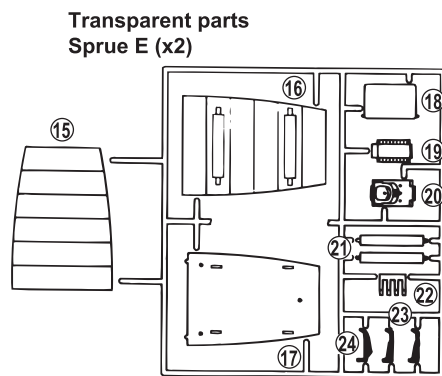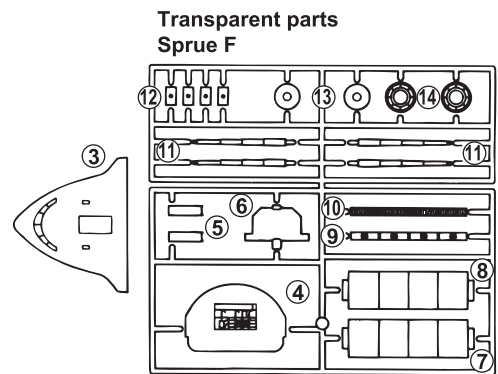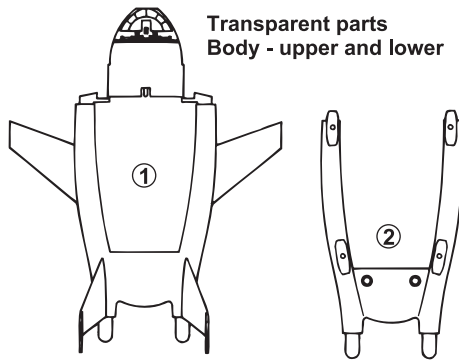

### TB2 decals

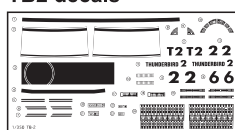



### Pod decals




### Rescue decals





# 1 Transparent Thunderbird 2 Body assembly

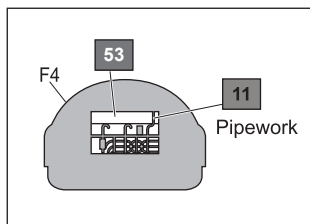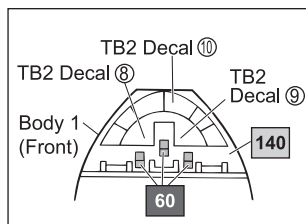


G40 and G41 need to match the housing. So, gently bend here until they fit.

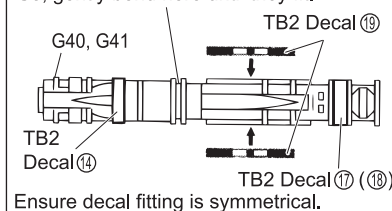

Ensure decal fitting is symmetrical.

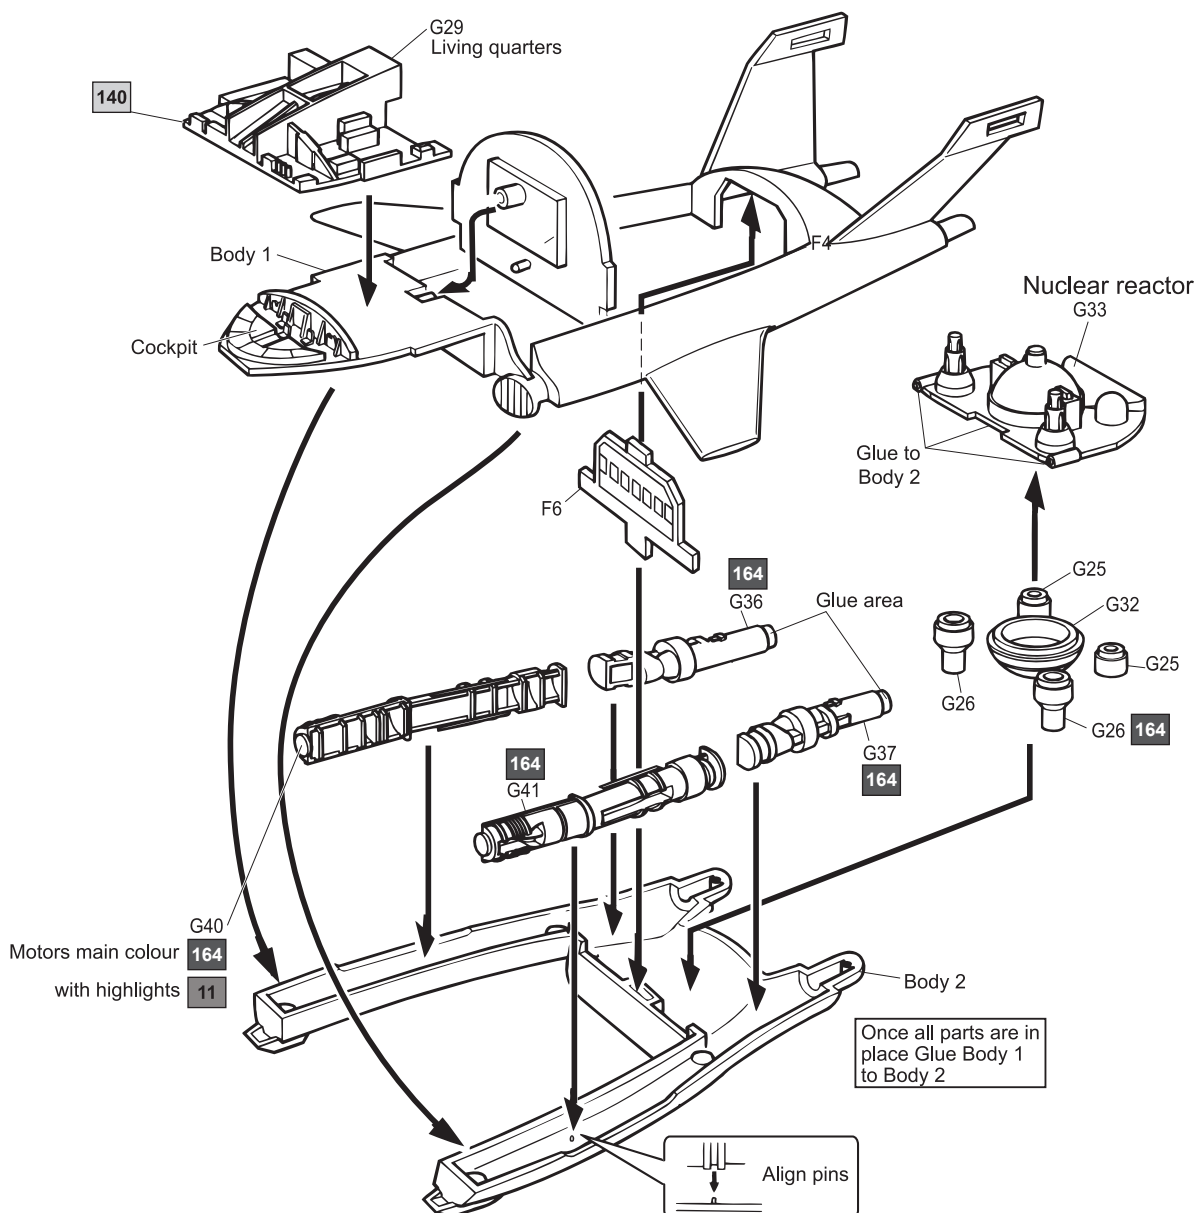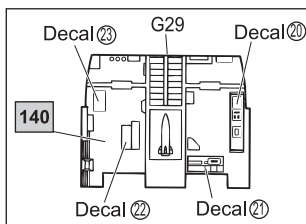


## 2 Transparent Thunderbird 2 Rear Engine assembly

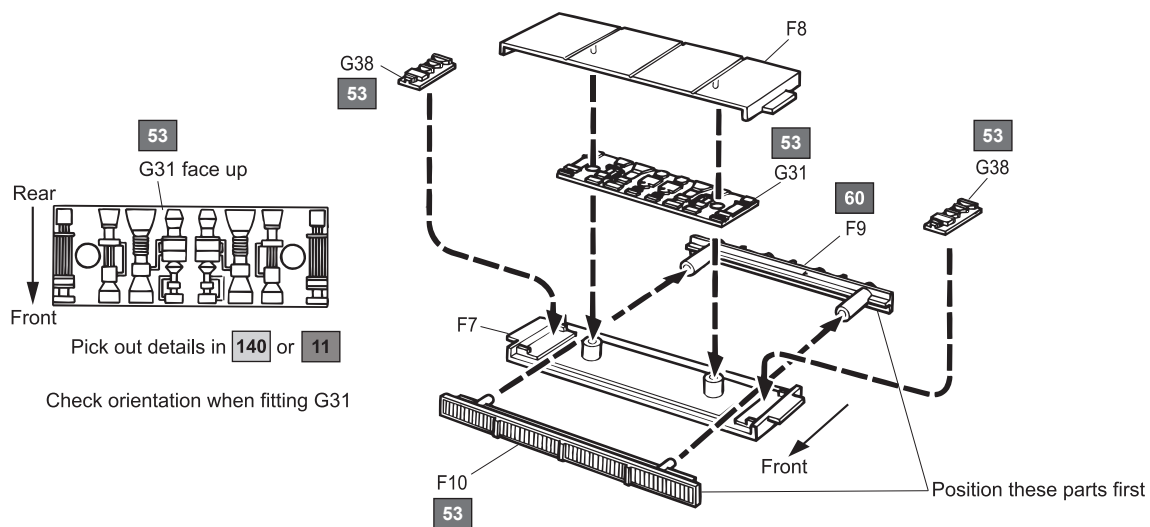

## 3 Transparent Thunderbird 2 assembly


Tips:

Humbrol ClearFix is recommended for fixing small clear parts and window.  
Liquid glue may give better results than cement for large joints.

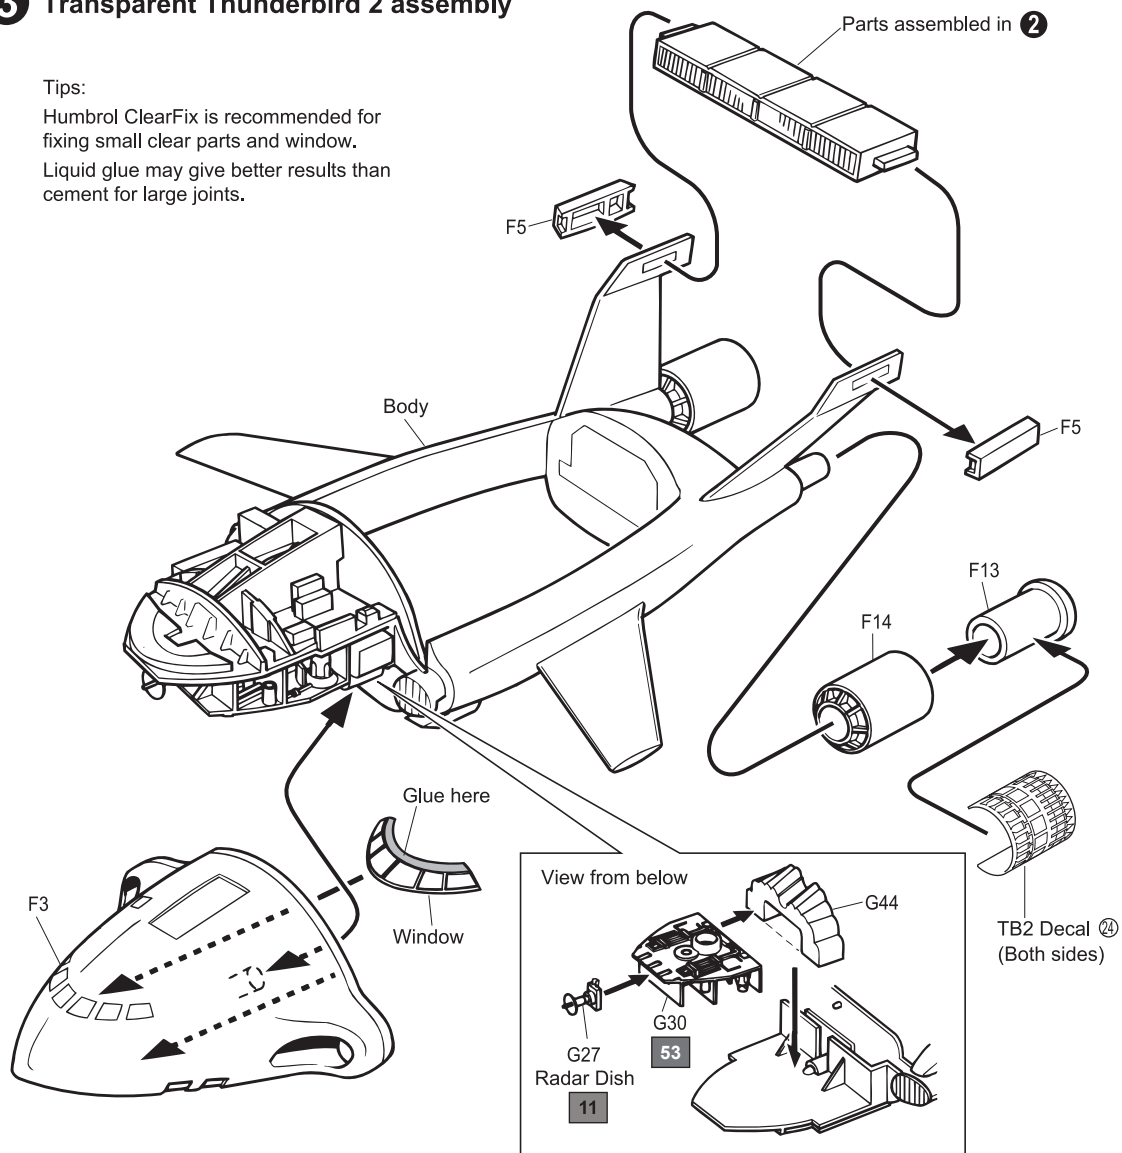


4


- Do not glue E18 (Door) or E21 (Rollers) - these are movable parts
- 2 pods can be assembled

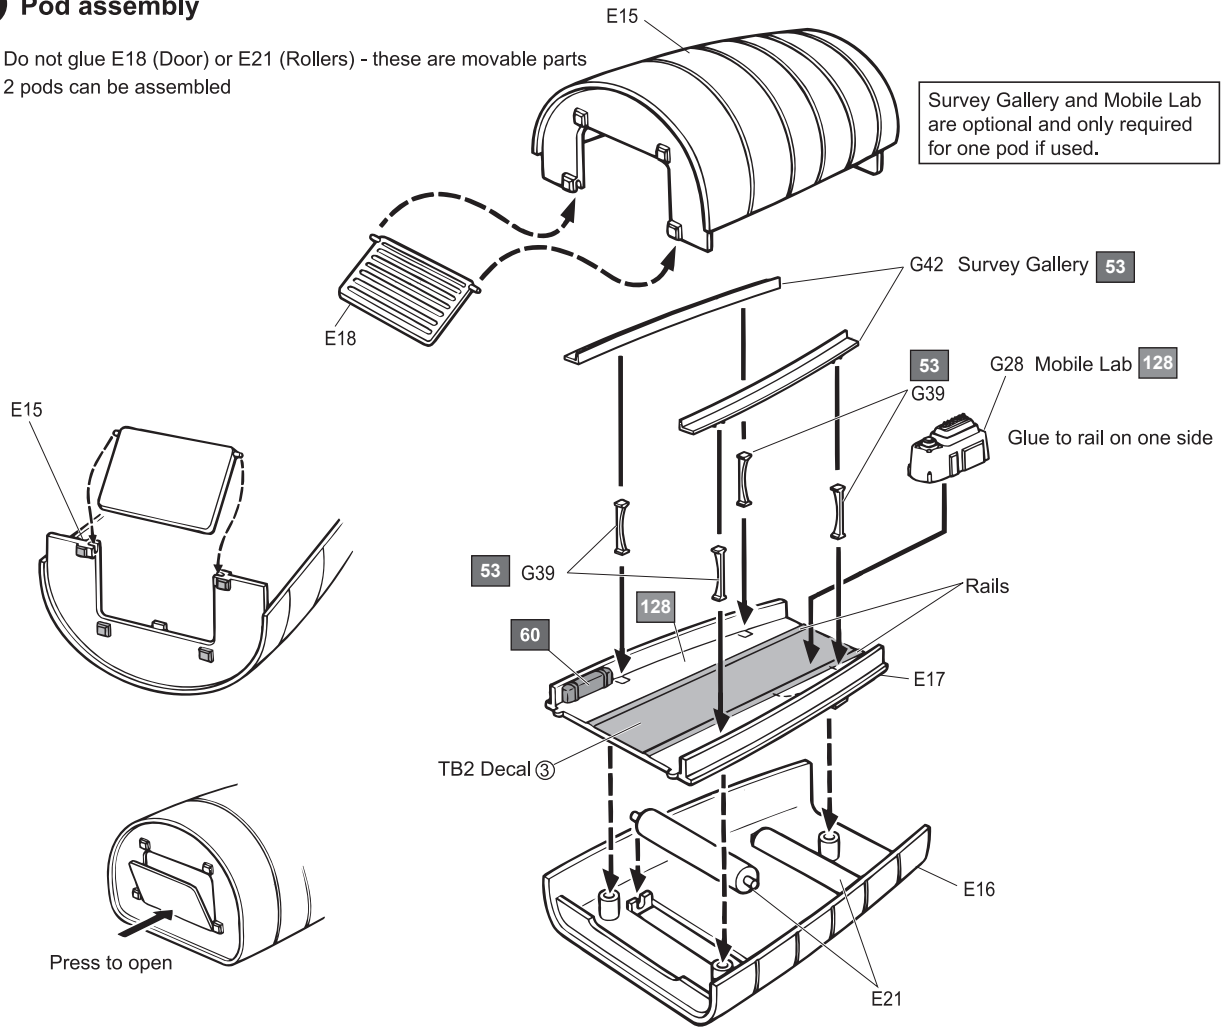


5

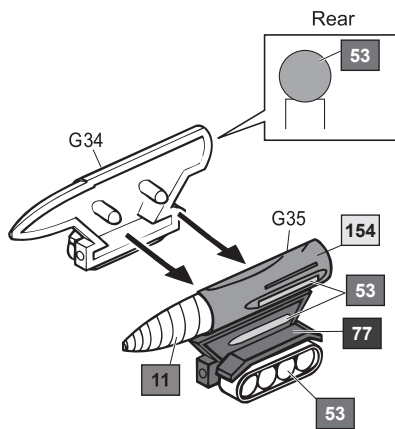

6

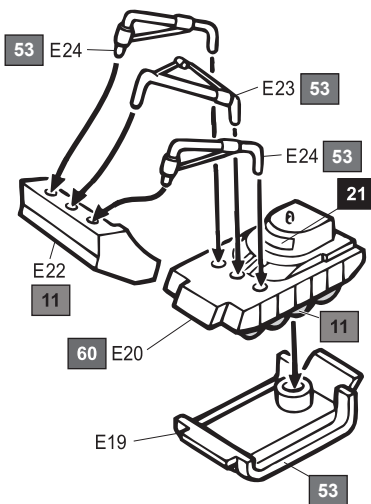


7

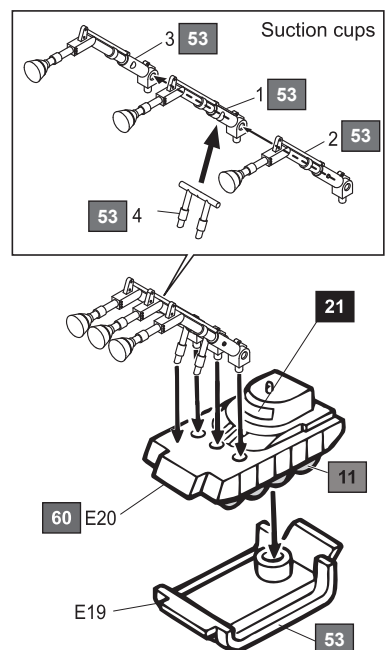





## 8 Radio Transmitter Truck "Jodrell 6"

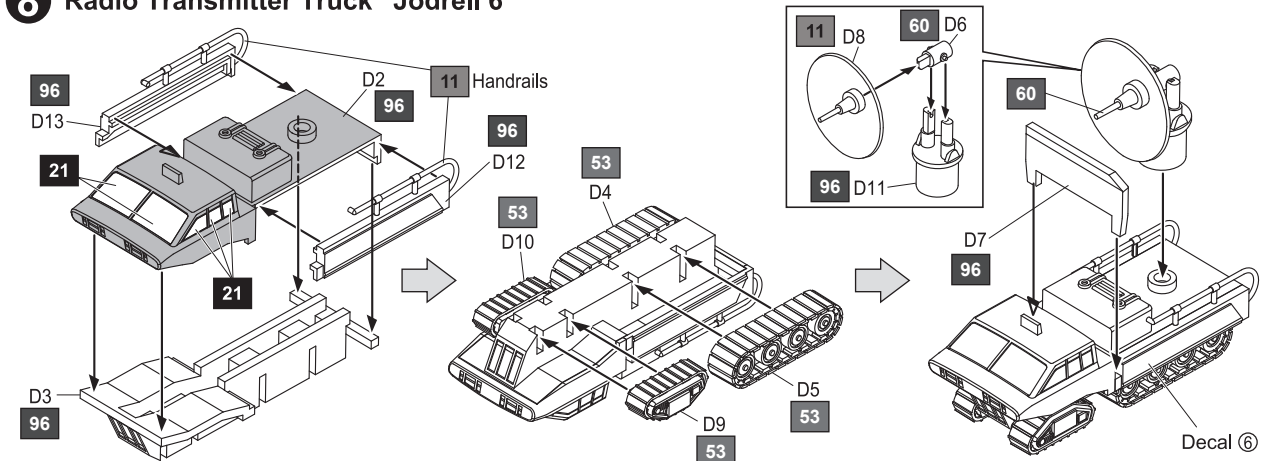


## 9 Fire Truck

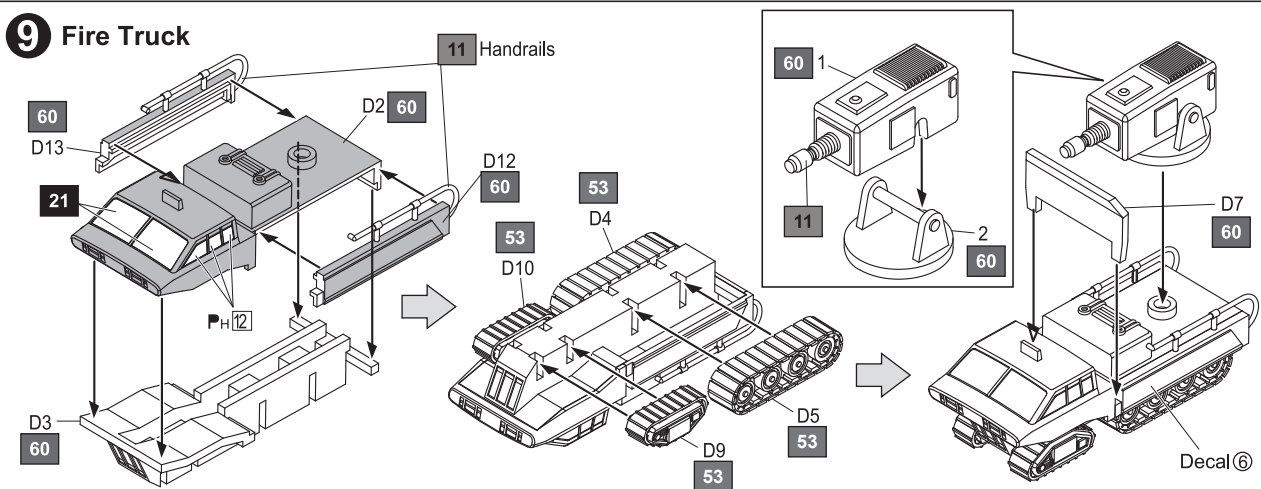


## 10 Firefly (x2)

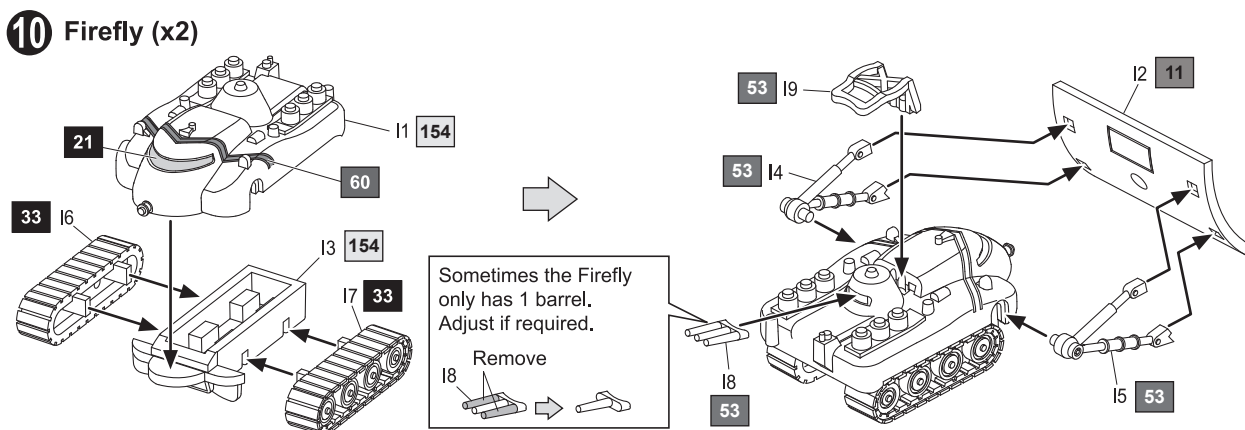


## 11 Magnetic Tow Truck (x2)

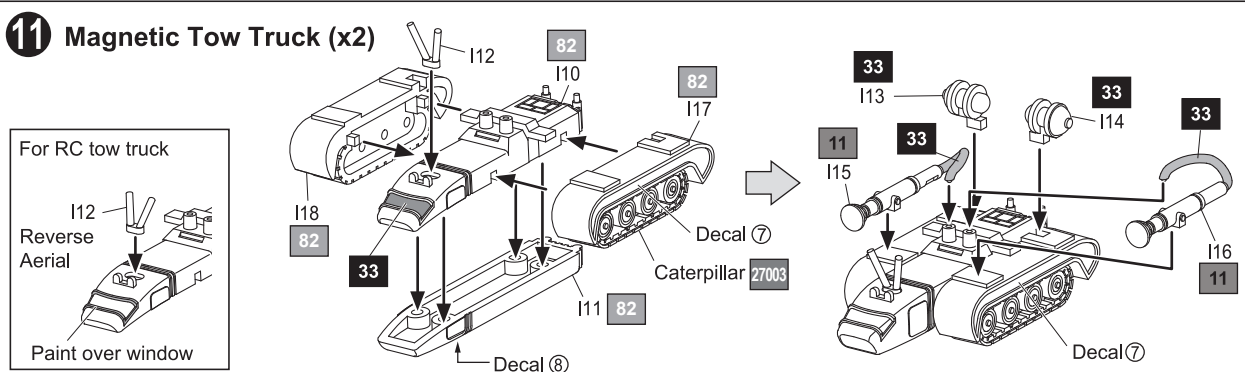


## 12 Master Elevator Car (assemble x 1)

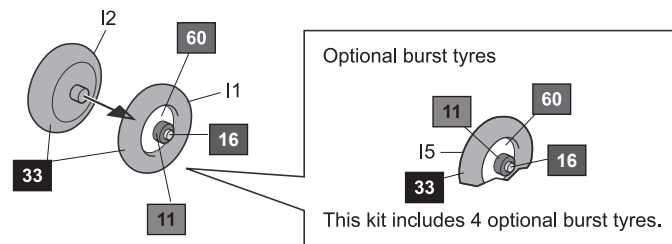



Assemble 6 sets

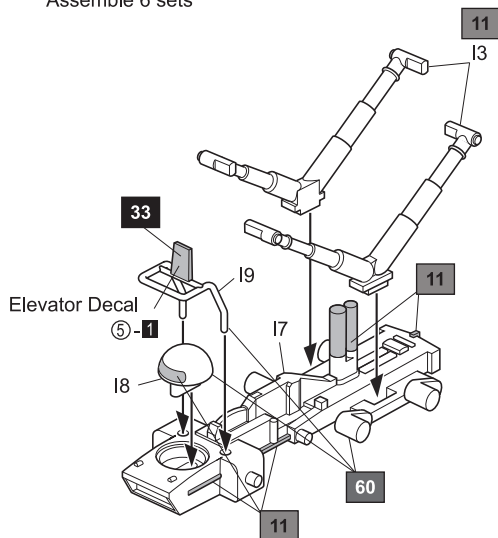



The number in ( ) refers to the opposite side.

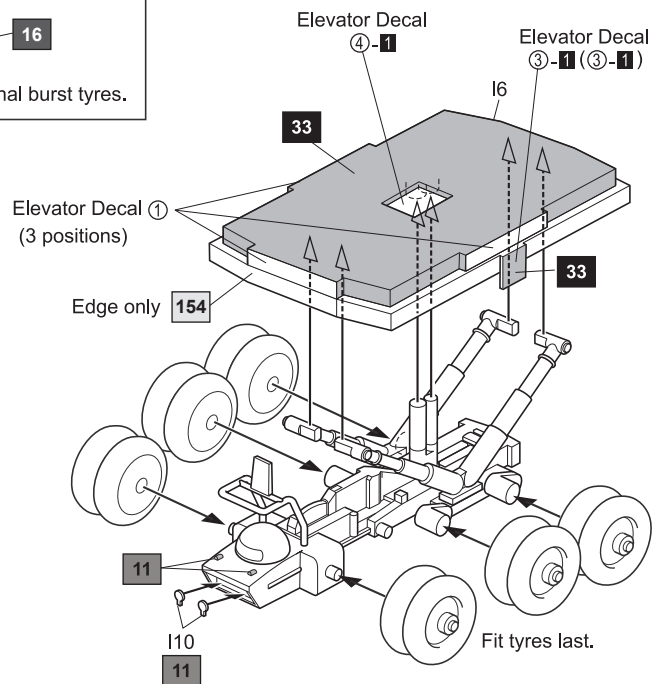

## 13 Subsidiary Elevator Cars (assemble x 3)

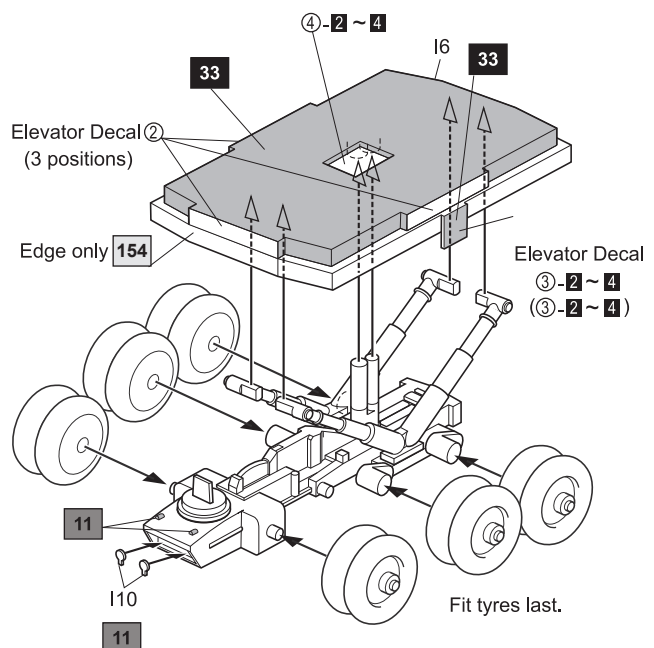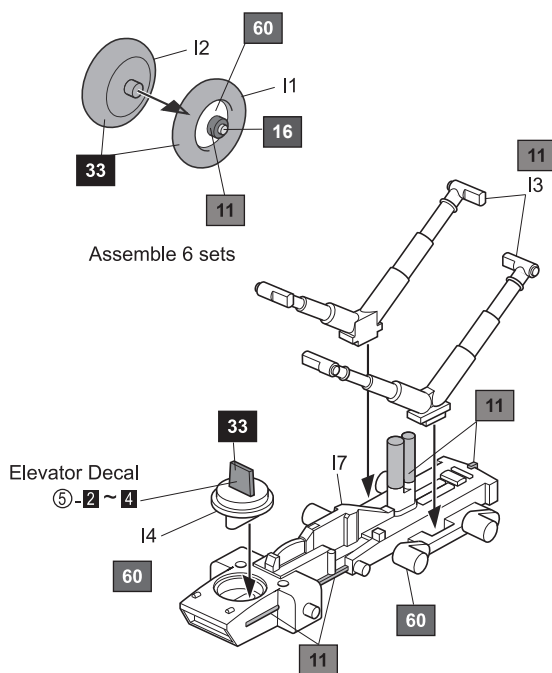


# 14 Transparent Thunderbird 2 Decal application and final assembly

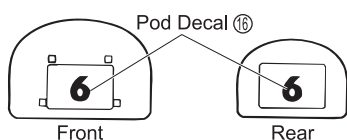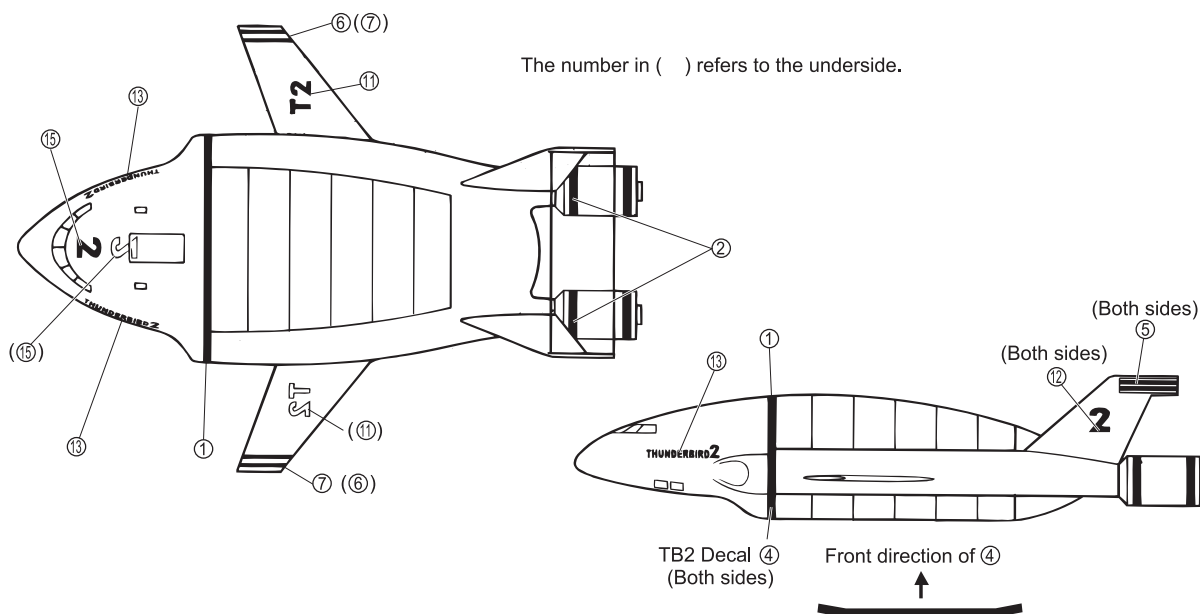

Select the Pod decal number from:

Fire Truck	Pod 1
DOMO	Pod 3
Elevator cars	Pod 3
The Mole	Pod 3 or 5
Firefly	Pod 3 or 6
Excavator	Pod 5
Recovery Vehicle	Pod 5
Transmitter Truck	Pod 6

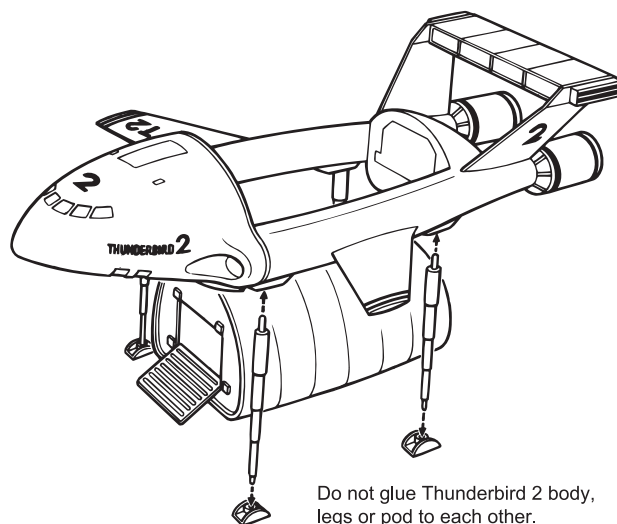

5, 4, 3, 2, 1... check out the rest of the range!

